

Instruction Manual

Soho Unit - A

INOX


In Collaboration with Inex Decor Corp, USA
An ISO 9001 : 2008 Company

Soho Unit with 8 Baskets			
1250 - 1650mm Ht.	For 450mm Cabinet	B3.01.101	
1250 - 1650mm Ht.	For 450mm Cabinet	B3.01.201	
1250 - 1650mm Ht.	For 450mm Cabinet	B3.01.301	


Soho Unit with 12 Baskets			
1750 - 2150mm Ht.	For 450mm Cabinet	B3.02.101	
1750 - 2150mm Ht.	For 450mm Cabinet	B3.02.201	
1750 - 2150mm Ht.	For 450mm Cabinet	B3.02.301	

Soho Unit with 12 Baskets			
1750 - 2150mm Ht.	For 600mm Cabinet	B3.02.102	

Step 1: According to the bottom dimension, mount the lower runner base on the bottom; According to the top dimension, mount the upper runner base under the top.

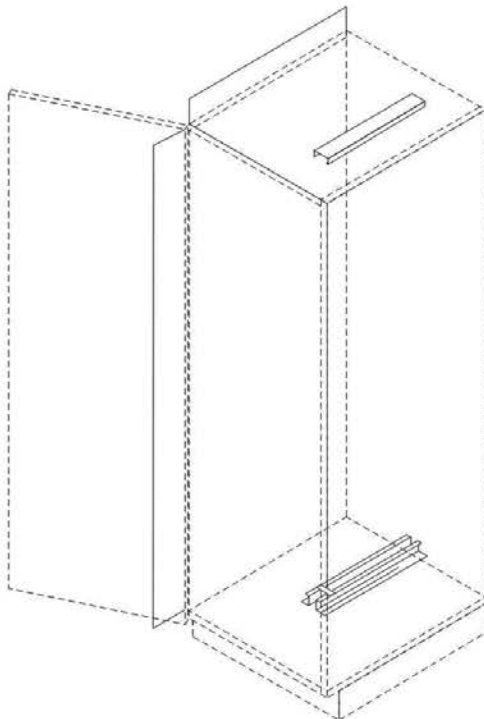


Step 2: Place the extension frame to the upper and lower runner base.

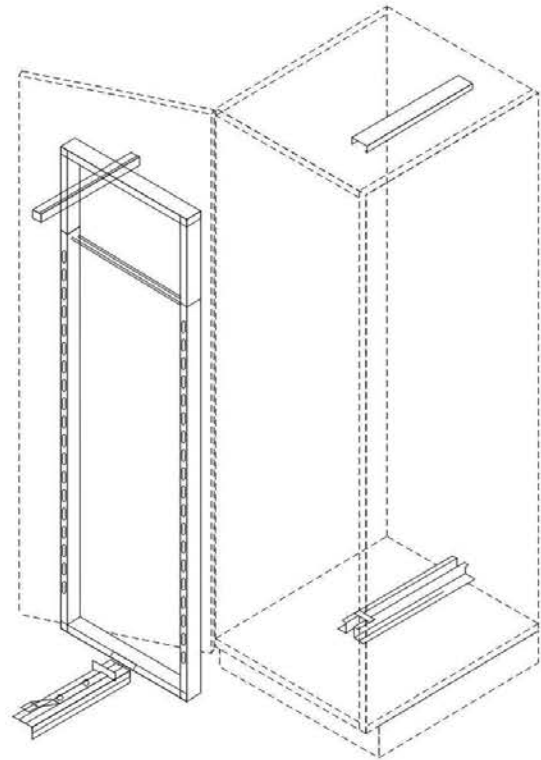

Top Dimension


Back

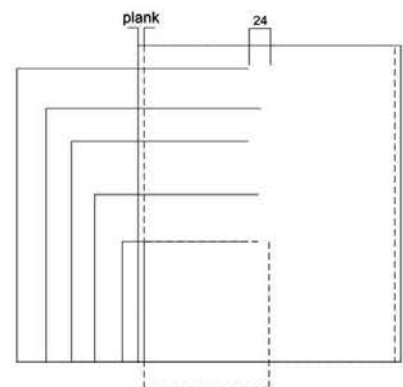

Front

Bottom Dimension

Back

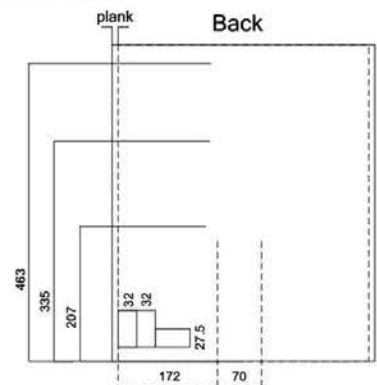

Front


⊙ The item can be assembled for left and right hand.

No.	Quantity	Description
1	1 set	Lower runners
2	1 set	Upper runners
3	1 pc	Extention frame
4	6 Pc	door frame bracket
5	2 pcs (AA120AA220)	Support bracket
6	2 pcs	Door brace
7	2 pcs	Plastic plug
8	1 pc	Lower handle
9	1 pc	Upper handle
10	1 pc	Swivel frame
11	1 pc	Runner cover
12	6 pcs (AA120.AA220) 4 pcs (AA180.AA280)	Basket (Large)
13	6 pcs (AA120.AA220) 4 pcs (AA180.AA280)	Basket (Small)


Instruction Manual

Soho Unit - B


Step 3: Place the plastic plug into the extension frame; According to the bottom dimension, mount the brackets to top and bottom front corner; According to the door dimension, mount the support brackets.

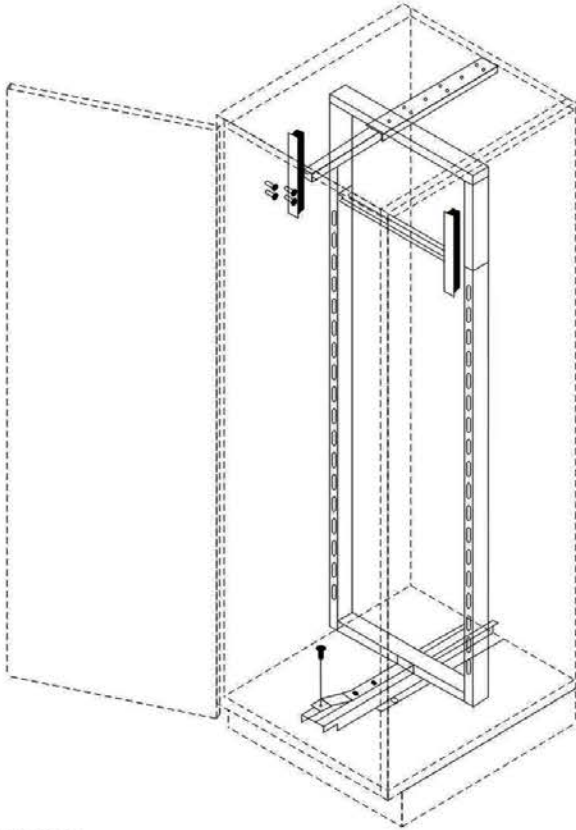

Step 4: Place the swivel frame on the bracket and support brackets, Screw the runner cover and lower runner to lower handle and screw lower handle to the door brace. Also Screw the upper handle and upper runner to upper door brace.

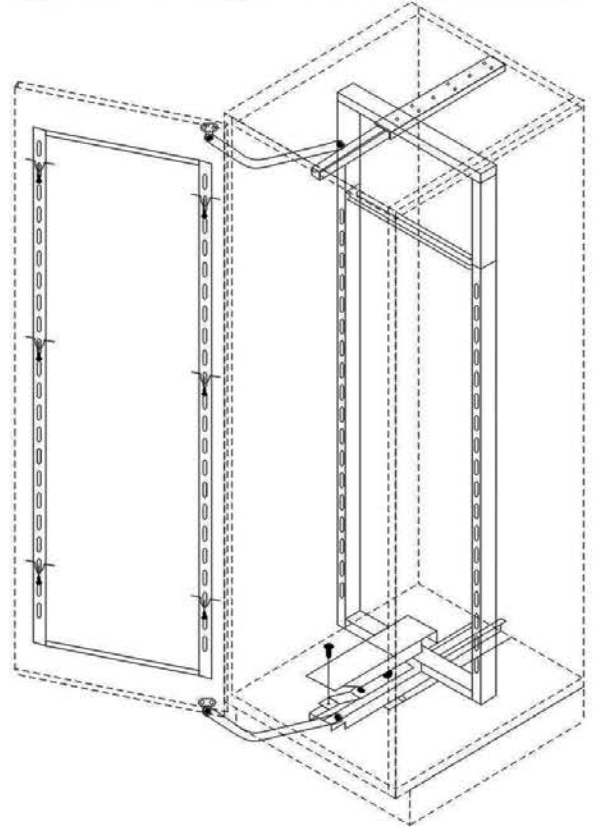

Door Dimension

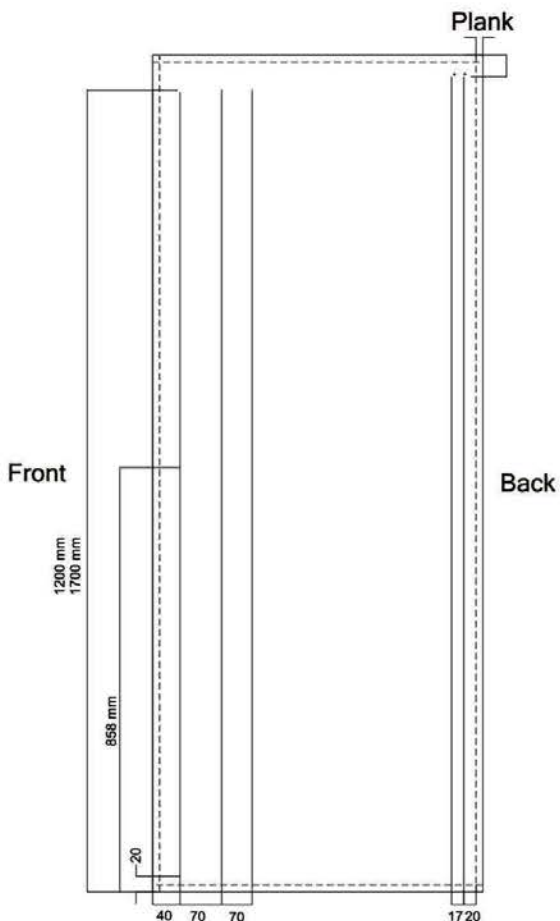

Step 5: Place the large baskets on the extension frame, the small baskets on the swivel frame and finish.

